

MFP**TT-073113_1****TECHNICAL
TIP****Models: All MX Models****Priority** Medium**Date:** July 2013**Subject: Creating a LAN Attached Printer Device
Description for Sharp MFPs on the IBM AS400**

This document contains information on creating and configuring a LAN attached printer for sending IBM AS400 print jobs to Sharp MFPs using the RAW (port) printing protocol. It is intended as a training aid for users with little or no experience with the IBM OS400 operating system or advanced users unfamiliar with setting up printing to Sharp MFPs. Printing to a LAN attached printer is the preferred printing method for the IBM AS400 as it supports functions not possible with the LPR/LPD protocol used with a remote output queue:

1. Bi-directional communications with Sharp MFPs is supported.
2. The Page Range printing function is supported.
3. The page size can be included in the printer device description.

NOTE: While all current Sharp non GDI MFPs support the RAW printing protocol, not all older Sharp models are supported. Check the documentation for the specific Sharp MFP to determine if it supports the RAW (port) printing protocol before attempting to create a printer device description,

To create a printer device description for a Sharp MFP on the AS400, you must log into the AS400 with a user account with sufficient administrative rights to use the following CL (Command Line) programs:

- VFYTCPCNN - (Verify TCP/IP Connection) or
- PING - (Verify TCP/IP Connection)
- CRTDEVPRT – (Create Device Description – Printer)
- DLTDEVD – (Delete Device Description)
- VRYCFG – (Vary Configuration)
- WRKCFGSTS – (Work with Configuration Status)
- STRPRTWTR – (Start Printer Writer)
- ENDWTR – (End Writer)
- WRKSPLF – (Work with Spooled Files)
- CHGDEVPRT – (Change Device Description – Printer)
- CHGUSRPRF – (Change User Profile)
- CHGPRF – (Change Profile)
- STRSEU – (Start Source Entry Utility)

The following steps must be taken to ensure that the Printing Device Description will successfully print to the Sharp MFP:

- 1) Configure the Sharp MFP with the correct information for the AS400 network.
- 2) Log into the AS400 using a telnet session with a Terminal Emulation Program.

- 3) Verify network connectivity from the AS400 to the Sharp MFP.
- 4) Review required printer device description parameters for Sharp MFPs.
- 5) Create and configure a printer device description for the Sharp MFP.
- 6) Start the printer device description and the writer for the printer.
- 7) Test the printer using spooled system files.
- 8) Apply a Workstation Customizing Object to the printer device description.
- 9) Set the printer device description for the Sharp MFP as the user's default printer.
- 10) Test user's default printer with application printing.

1) Configure the Sharp MFP

a) Configure the Sharp MFP with the correct TCP/IP information that is to be connected to the AS400 network. Record the information below:

Sharp Model: _____

IP address: _____

Subnet Mask: _____

Gateway: _____

The screenshot shows the configuration interface for a Sharp MFP. On the left is a navigation menu with options like 'Top Page', 'Status', 'Address Book', 'Document Operations', 'Job Programs', 'User Control', 'System Settings', 'Network Settings', 'Quick Settings', 'General Settings', 'Protocol Settings', 'Services Settings', and 'Print Port Settings'. The 'Network Settings' section is expanded, showing a sub-menu with 'TCP/IP', 'NetWare', 'EtherTalk', and 'NetBEUI'. The 'TCP/IP' tab is selected, and the 'TCP/IP Settings' section is active. A 'Submit(U)' button is visible at the top of the settings area. The settings are as follows:

TCP/IP:	Enable
DHCP/BOOTP:	Disable
RARP:	Disable
IP Address:	172.29.105.97
Subnet Mask:	255.255.254.0
Default Gateway:	172.29.104.1
Use FTP/LPD Banner:	Disable

b) Ensure that the RAW printing protocol is enabled on Sharp models with printer port control. If you are using either the *IBMPJLDRV or the *HPPJLDRV system driver check the bidirectional communications box. (NOTE: These system drivers are NOT recommended as the use an outmoded PJI USTATUS command that is not supported by newer Sharp MFP models for bidirectional communications. Definitions for the 3 system drivers supported by various Sharp MFPs are covered in Section 4, Item 19).

c) Port numbers can vary from model to model or can be changed by the operator. Record the port number that the MFP uses for RAW and record below:

Port Number: _____

MX-5500N <hr/> <ul style="list-style-type: none"> ▢ Top Page ▸ Status ▸ Address Book ▸ Document Operations ▸ Job Programs ▸ User Control ▸ System Settings ▾ Network Settings <ul style="list-style-type: none"> ▢ Quick Settings ▢ General Settings ▢ Protocol Settings 	Print Port Settings <input type="button" value="Update(R)"/>		
	<input type="button" value="LPD"/> <input type="button" value="RAW"/>		
	<input type="button" value="Submit(U)"/>		
	Raw Print Settings		
	Raw Print:	<input type="button" value="Enable"/>	
	Port Number:	<input type="text" value="9100"/>	(0-65535)
	Timeout:	<input type="text" value="90"/>	seconds(0-120)
	<input checked="" type="checkbox"/> Use Bidirectional		
	<input type="button" value="Submit(U)"/>		

d) If you are planning on using the *IBMSNMPDRV system driver (or unsure which system driver you will be using), make sure that the SNMP protocol is enabled and that the Get Community and TRAP Community names are set to "public". (See Section 4, Item 19 for further information.) The *IBMSNMPDRV can be used with most Sharp MFPs and it is the recommended system driver for all newer models.

<input type="button" value="WINS"/>	<input type="button" value="SMTP"/>	<input type="button" value="SNMP"/>			
<input type="button" value="Kerberos"/>	<input type="button" value="SNTP"/>	<input type="button" value="mDNS"/>	<input type="button" value="DNS"/>		
<input type="button" value="Submit(U)"/>					
SNMP v1 Settings					
SNMP v1 Settings:	<input type="button" value="Enable"/>				
Access Method	<input checked="" type="radio"/> Read-write Access <input type="radio"/> Read-only Access (Use "public" for the GET Community Name)				
GET Community:	<input type="text" value="public"/> (Up to 15 characters)				
SET Community:	<input type="text" value="....."/> (Up to 15 characters) <input type="checkbox"/> Change SET Community				
TRAP Community:	<input type="text" value="public"/> (Up to 15 characters)				

2) Log into the AS400 Server

a) To log into the AS400 Server, you must have an IBM 5250 compatible terminal emulation program. There are numerous terminal programs available including IBM's Client Access which includes other tools. A low cost alternative is the MochaSoft TN5250 Terminal Emulation Program. Whatever terminal emulation program you use, it must be configured with the IP address or host name of the AS400 server you are


connecting to. You will also need a user account with sufficient rights and permissions to create objects and change system settings. Record the required information below:

IP address/Host Name of AS400: _____

User Name: _____

Password: _____

b) Start the terminal emulation program and the login screen will appear as shown below. Enter your user name and press the <TAB> key to move to the password field and enter your password. (Note: User names and passwords are not case sensitive on the AS400.) Leave all other fields blank and press the <Enter> key when done. (Note: With the IBM Remote Console Program, the right hand <Ctrl> key is used for the <Enter> key.)

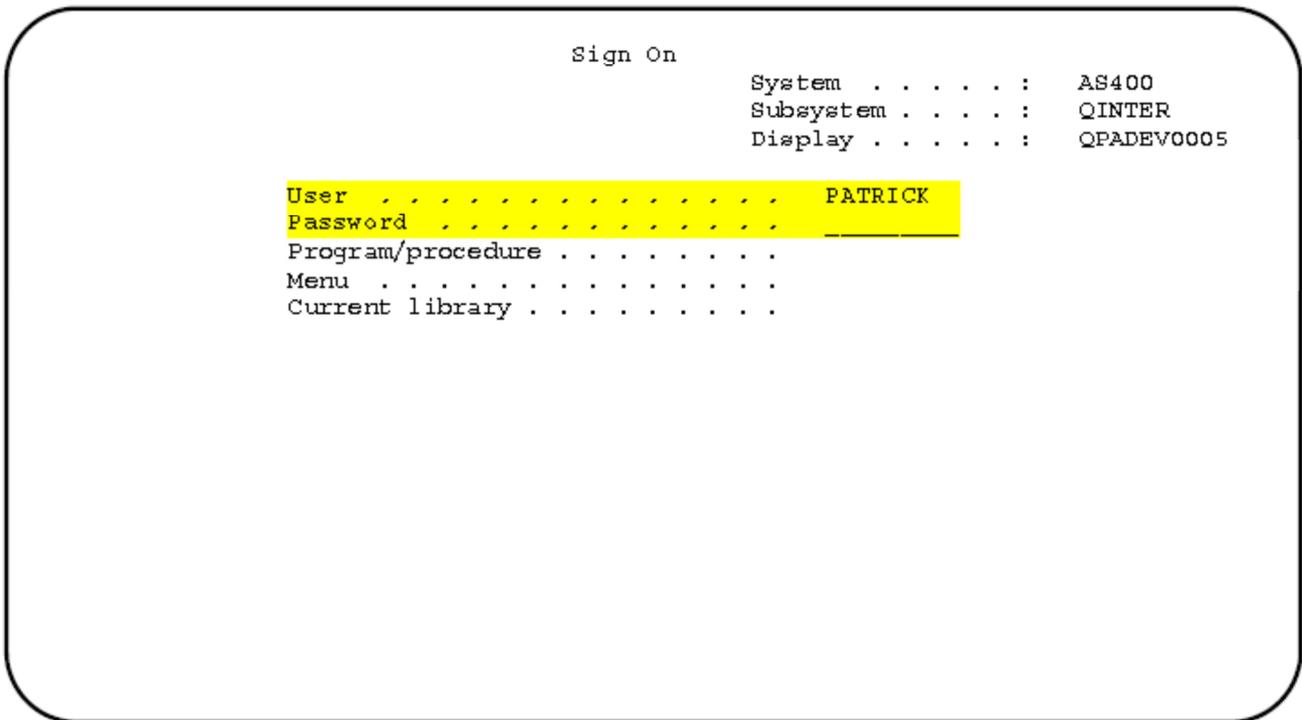

c) If the user was previously logged in, the following screen will appear. Press the <Enter> key to continue.

```
                                Sign-on Information
Previous sign-on . . . . . : 09/12/08 04:05:55      System:  AS400

Press Enter to continue.

F3=Exit sign-on request  F9=Change password
```

d) The next screen that appears will depend on how the administrator has your account set up. Typically, it will be a menu screen similar to the one shown below.

```
MAIN                                OS/400 Main Menu                                System:  AS400

Select one of the following:

  1. User tasks
  2. Office tasks

  4. Files, libraries, and folders

  6. Communications

  8. Problem handling
  9. Display a menu

 11. Client Access/400 tasks

 90. Sign off

Selection or command
===> _____
-----
F3=Exit  F4=Prompt  F9=Retrieve  F12=Cancel  F23=Set initial menu
```

A few general notes about the terminal console window and the keys used in it: In the above screen, the cursor is placed on the command line. Menu numbers, options or Command Line (CL) commands are typed

on this line. Below the command line, the function keys that can be used for this screen are shown. These will vary depending on the screen that is displayed. The IBM AS400 keyboard has 24 function keys rather than the 12 function keys found on PC keyboards. To access function keys higher than 12, you must use the <Shift> key in conjunction with the function key, i.e. <Shift> + <F1> = <F13>, <Shift> + <F2> = <F14> ~ <Shift> + <F12> = <F24>. The action taken by a specific function key can vary between different screens so it is important to read the prompts associated with the key before pressing it. However, the <F4> key is always used as a "prompt" key on the command line as well as a "list" key for field values when indicated. System messages are shown at the bottom of the screen to display error messages or the results of a command. Use the <TAB> key to move between screen fields and the command line. The Windows mouse pointer can also be used to move the cursor between fields. If there is more information than can be displayed on one screen, a prompt "More..." will appear in the lower right hand corner. To move to the next screen, press the <PgDn> key. Press the <PgUp> key to return to the previous screen.

3) Verify network connectivity to the Sharp MFP

- a) Before creating a printer device description, verify that the Sharp MFP is powered on and connected to the AS400 network.
- b) Place your cursor on the start of the command line and type "VFYTCPCNN" and press the <F4> key. (As an alternative, the "PING" command can be used in place of the "VFYTCPCNN" command.)

```

MAIN                                OS/400 Main Menu                                System:  AS400

Select one of the following:

    1. User tasks
    2. Office tasks

    4. Files, libraries, and folders

    6. Communications

    8. Problem handling
    9. Display a menu

   11. Client Access/400 tasks

   90. Sign off

Selection or command
==> VFYTCPCNN
-----
F3=Exit  F4=Prompt  F9=Retrieve  F12=Cancel  F23=Set initial menu

```

- c) When the following screen appears, type in the IP address or host name of the Sharp MFP with leading and trailing single quote marks (') and then press the <Enter> key.

```

Verify TCP/IP Connection (VFYTCPCNN)

Type choices, press Enter.

Remote system . . . . . '172.29.104.150'
-----
-----

Bottom
F3=Exit   F4=Prompt   F5=Refresh   F10=Additional parameters   F12=Cancel
F13=How to use this display   F24=More keys
    
```

d) The screen below will be displayed showing the system message: Verifying connection to host system xxx.xxx.xxx.xxx. The plus sign (+) indicates there are additional message lines to display.

```

MAIN                               OS/400 Main Menu                               System:  AS400

Select one of the following:

    1. User tasks
    2. Office tasks

    4. Files, libraries, and folders

    6. Communications

    8. Problem handling
    9. Display a menu

   11. Client Access/400 tasks

   90. Sign off

Selection or command
===> _____

F3=Exit   F4=Prompt   F9=Retrieve   F12=Cancel   F23=Set initial menu

Verifying connection to host system 172.29.104.150 +
    
```

e) The VFYTCPCNN or PING command issues a Ping 5 times when it is executed. Click on the plus sign (+) with your mouse and press the <PgDn> key to display the results of the Ping.

```

MAIN                               OS/400 Main Menu                               System:  AS400
Select one of the following:

    1. User tasks
    2. Office tasks

    4. Files, libraries, and folders

    6. Communications

    8. Problem handling
    9. Display a menu

   11. Client Access/400 tasks

   90. Sign off

Selection or command
====> _____
F3=Exit  F4=Prompt  F9=Retrieve  F12=Cancel  F23=Set initial menu
PING reply 1 from 172.29.104.150 took 2 ms. 256 bytes. TTL 255. +

```

If the Sharp MFP is available on the network, the message line will change as shown below each time the <PgDn> key is pressed:

```

PING reply 2 from 172.29.104.150 took 2 ms. 256 bytes. TTL 255. +
PING reply 3 from 172.29.104.150 took 2 ms. 256 bytes. TTL 255. +
PING reply 4 from 172.29.104.150 took 2 ms. 256 bytes. TTL 255. +
PING reply 5 from 172.29.104.150 took 2 ms. 256 bytes. TTL 255. +
Round-trip (in milliseconds) min/avg/max = 1/1/2
Connection verification statistics: 5 of 5 successful (100 %).

```

f) If the connection to the MFP is not confirmed, correct the problem before proceeding.

4) Review required printer device description parameters for Sharp MFPs.

While AS400 printer device descriptions created with the CRTDEVPRT command have a number of parameters, not all parameters need to be changed from the system defaults for Sharp MFPs. Listed below are only the parameters that are required or recommended for use with Sharp MFPs in the printer device description. All other values can be left at the system defaults.

NOTE: All descriptions shown are from Version V5R1 of the OS400 operating system. Other versions descriptions may vary slightly from those shown below.

1. Device description – The name of the printer is required. It can be any name you desire unless a printer device description already exists with that name.
2. Device class – This defines how the print device is attached to the network. Printers (such as Sharp MFPs) that are connected directly to the AS400 network by an Ethernet cable must use *LAN as the device class.
3. Device type – This defines what types of data streams are supported by the print device. The IBM AS400 can send EBCDIC (Extended Binary Coded Decimal Interchange Code) or ASCII (American Standard Code for Information Interchange) data streams to printers. Different types of IBM printers are assigned different numbers depending on the data streams they can use. Non IBM page printers that support ASCII are defined as type 3812 by IBM. As Sharp MFPs use ASCII data streams, enter 3812 for the device type.

4. Device model – This number defines the operational characteristics of the device combined with the device type. Type 3812 printers (such as Sharp MFPs) can only have a model value of 1 which indicates they support PDL and SNMP communications.
5. LAN attachment – This needs to be set to *IP as the AS400 will communicate with the Sharp MFP using the TCP/IP protocol. The default value is *LEXMARK.
6. Port number – Typically, this value is set to 9100 but the port number must be set to the same value as the port number used by the Sharp MFP.
7. Font: Identifier – Normally this value is set to 11, which is the default 10 CPI font. A font ID is required to create the device description. Unless there is a special requirement in your operation for a different font, set this value to 11.
8. Form feed – The default value is set to *TYPE. However this value must be set to *Autocut for all Sharp MFPs.
9. Printer error message – This defaults to *INQ but IBM recommends that this value should be set to *INFO so the printer's message queue will receive informational messages whenever possible. If this is set to *INQ and a problem occurs on the MFP (for example, off line or in a paper jam) a message will be sent to the printer's message queue that must be answered before printing can continue. Often, this can also cause the writer to end while in the middle of a spooled file.
10. Activation timer – The activation timer refers to the amount of time to wait for the LANattached printer device to respond. The printer device is considered not available, and an error message is posted if there is no connection before this timer expires. This defaults to 170 (seconds) which should be sufficient for normal operations but can be set from any value from 1 to *NOMAX.
11. Inactivity timer – This value determines when the print driver closes the connection to the printer (freeing it up to received spooled output from another source) once there are no operating system spooled files left in RDY (ready) status. While this value defaults to *ATTACH, IBM recommends that this be set to *SEC15 so the operating system will free up the printer 15 seconds after all RDY (Ready) spooled files have been processed.
12. Host Print Transform – This needs to be set to *YES so the AS400 Host Print Transform (HPT) function will convert both SCS (SNA Character Stream - a text-based, EBCDIC data stream) and AFPDS (Advance Function Presentation Data Stream) spooled files to the printer's data stream.
13. Manufacturer type and model – The IBM AS400 ships with predefined printer descriptions from a number of manufacturers, but Sharp does not provide one. For basic printing functionality, set this value to *HP8000. Sharp MFPs closely match this model but not exactly. For full functionality, a modified Workstation Customizing Object for the specific Sharp model would be used. In that case, this value would be set to *WSCST.
14. Paper source 1 – By convention, this is set to *LETTER for the paper size when creating the printer device description. It can later be modified to reflect the paper size in Tray 1.
15. Paper source 2 – This is also set to *LETTER for the paper size when creating the printer device description. It can later be modified to reflect the actual paper size in Tray 2.
16. Envelope source – As Sharp MFPs normally do not offer an envelope feeder option, the recommended value should be set to *NONE.
17. Remote location: Name or address – This parameter must be set to the Sharp MFP's TCP/IP address or DNS name if a DNS server is being used. If a TCP/IP address is used, it should be entered without leading zeros (for example, use '172.29.105.97' instead of '172.029.105.097'). Whether using an IP address or a DNS name, the entries should be delimited with a single quote mark (').
18. Data transform program – Ensure that this value is set to *NONE when using the Host Print Transform function.
19. System driver program – This driver determines the bidirectional communications protocol used by the AS400 to get information from the Sharp MFP. Currently, there are 3 systems drivers that can be used by Sharp MFPs. The system driver selected to use with the Sharp MFP is dependent on the network infrastructure and end user preferences.

- a. *IBMSNMPDRV – This driver uses the SNMP (Simple Network Management Protocol) for communications with the Sharp MFP. This driver does not require that bidirectional communications be enabled for RAW printing. However, SNMP must be enabled with the Get Community and TRAP Community names set to “public”. This allows the printer device description to check the status of the Sharp MFP using the SNMP port rather than the RAW printing port. Again, this is the recommended system driver for newer Sharp MFPs.
 - b. *IBMPJLDRV – This driver written by IBM uses the HP PJI USTATUS command to query the status of printers before sending a print job on the port used for printing. NOTE: While older Sharp models can use this system driver, newer MFP models do not support the PJI USTATUS command so it is not recommended.)
 - c. *HPPJLDRV – This driver is written specifically for HP printers but it is functionally identical to the *IBMPJLDRV system driver. As with the *IBMPJLDRV, this system driver is not recommended
20. Publishing Information – This is not required, but it is a good practice to include this information about the Sharp MFP capabilities:
21. Workstation Customizing Object – Set this value to *NONE if the Manufacturer Type and Model is set to *HP8000. Otherwise if it is set to *WSCST, fill in the name of the workstation customizing object (WSCST) for the specific Sharp model being used.

5) Create and configure the Printer Device Description for the Sharp MFP.

The following example for creating a printer device description with the Create Device Description – Printer (**CRTDEVPRT**) command is based on using a *Sharp MX-5500N* with the Port for RAW printing set to 9100 at an IP address of 172.29.104.150. Record the values that you will need to use to create your own printer device description.

Device description _____
 Port Number: _____
 Host/DNS name (if used) _____
 IP address: _____
 System driver program _____

- a) Place your cursor on the start of the command line and type “**CRTDEVPRT**” and press the <F4> key and the following screen will appear:

```

Create Device Desc (Printer) (CRTDEVPRT)

Type choices, press Enter.

Device description . . . . . _____ Name
Device class . . . . . _____ *LCL, *RMT, *VRT, *SNPT, *LAN
Device type . . . . . _____ 3287, 3812, 4019, 4201...
Device model . . . . . _____ 0, 1, 2, 3, 4, 10, 13, 301...

                                                                 Bottom
F3=Exit   F4=Prompt   F5=Refresh   F10=Additional parameters   F12=Cancel
F13=How to use this display   F24=More keys

```

b) Type in the desired name of your printer in the Device description field and then press the <F9> key to display all the parameters for the printer device description. Fill in the values for the following fields: Device class > *LAN, Device type > 3812, Device model > 1 and LAN attachment > *IP. Tab to the Port number field and enter the RAW port number of your Sharp MFP.

```

Create Device Desc (Printer) (CRTDEVPRT)

Type choices, press Enter.

Device description . . . . . > MX5500      Name
Device class . . . . . > *LAN             *LCL, *RMT, *VRT, *SNPT, *LAN
Device type . . . . . > 3812             3287, 3812, 4019, 4201...
Device model . . . . . > 1               0, 1, 2, 3, 4, 10, 13, 301...
LAN attachment . . . . . > *IP           *LEXLINK, *IP, *USRDFN
Switched line list . . . . .             Name
      + for more values
LAN remote adapter address . . . . . 000000000001-FFFFFFFFFFFF
Adapter type . . . . . *INTERNAL         *INTERNAL, *EXTERNAL
Adapter connection type . . . . . *PARALLEL *PARALLEL, *SERIAL
Emulated twinaxial device . . . . . 3812, 5219, 5224, 5256
Advanced function printing . . . . . *NO *NO, *YES
AFP attachment . . . . . *WSC           *WSC, *APPC
Port number . . . . . > 9100            0-65535
Switch setting . . . . .             0, 1, 2, 3, 4, 5, 6
Local location address . . . . .       00-FE

                                                                 More...
F3=Exit   F4=Prompt   F5=Refresh   F12=Cancel   F13=How to use this display
F24=More keys

```

d) When the following screen appears, ensure that the Activation timer is set to 170 and the Inactivity timer is set to *SEC15. Press the <PgDn> key to move to the next screen.

```

Create Device Desc (Printer) (CRTDEVPRT)

Type choices, press Enter.

Message queue . . . . . *CTLD      Name, *CTLD, *SYSOPR, QSYSOPR
  Library . . . . .           Name, *LIBL, *CURLIB
Maximum length of request unit *CALC      *CALC
Application type . . . . . *NONE      *NONE, *NRF, *DEVINIT...
Activation timer . . . . . 170        1-2550, *NCMAX
Inactivity timer . . . . . > *SEC15  1-30, *ATTACH, *NCMAX...
SNA pass-through device desc . . *NONE      Name, *NONE
SNA pass-through group name . . *NONE      Name, *NONE
Host signon/logon command . . . *NONE

-----

Pacing . . . . . 7                1-7
Line speed . . . . . *TYPE        *TYPE, 150, 300, 600, 1200...
Word length . . . . . *TYPE        *TYPE, 7, 8
Type of parity . . . . . > *NONE    *TYPE, *EVEN, *ODD, *NONE...
                                           More...

F3=Exit   F4=Prompt   F5=Refresh   F12=Cancel   F13=How to use this display
F24=More keys

```

e) Fill in the values for the following fields: Host print transform > *YES, and Manufacturer type and model > *HP8000. The recommended values for the paper and envelope sources are: Paper source 1> *LETTER, Paper source 2> *LETTER and Envelope source > *NONE. Press the <PgDn> key to move to the next screen.

```

Create Device Desc (Printer) (CRTDEVPRT)

Type choices, press Enter.

Stop bits . . . . . > 1            *TYPE, 1, 2
Host print transform . . . . . > *YES      *NO, *YES
Manufacturer type and model . . . > *HP8000
Paper source 1 . . . . . > *LETTER      *MFRTYPMDL, *LETTER...
Paper source 2 . . . . . > *LETTER      *MFRTYPMDL, *LETTER...
Envelope source . . . . . > *NONE       *MFRTYPMDL, *MONARCH...
ASCII code page 899 support . . *NO        *NO, *YES
Image configuration . . . . . *NONE      *NONE, *IMGA01, *IMGA02...
Maximum pending requests . . . . 6        1-31
Print while converting . . . . . *YES      *NO, *YES
Print request timer . . . . . *NCMAX    1-3600, *NCMAX
Form definition . . . . . F1C10110      Name
  Library . . . . .           *LIBL      Name, *LIBL, *CURLIB
Character identifier:
  Graphic character set . . . . *SYSVAL    1-32767, *SYSVAL
  Code page . . . . .           1-32767
                                           More...

F3=Exit   F4=Prompt   F5=Refresh   F12=Cancel   F13=How to use this display
F24=More keys

```

f) For the Remote location: Name or address field, enter the DNS name or the IP address of the Sharp MFP delimited with single quote marks ('). Ensure that the Data transform program field is set to *NONE. Press the <PgDn> key when finished

```

Create Device Desc (Printer) (CRTDEVPRT)

Type choices, press Enter.

Remote location:
Name or address . . . . . > '172.29.104.150'

Local location . . . . . *NETATR      Name, *NETATR
Mode . . . . . QSPWTR      Name, QSPWTR, *NETATR
User-defined options . . . . . *NONE    Character value, *NONE
+ for more values
User-defined object:
Object . . . . . *NONE          Name, *NONE
Library . . . . .             Name, *LIEL, *CURLIB
Object type . . . . .         *DTAARA, *DTAQ, *FILE...
Data transform program . . . . . *NONE    Name, *NONE
Library . . . . .             Name, *LIEL, *CURLIB

More...

F3=Exit   F4=Prompt   F5=Refresh   F12=Cancel   F13=How to use this display
F24=More keys

```

g) In the System driver program field, enter the system driver to be used with the Sharp MFP. This value is determined by the network environment and user preferences and can be: *IBMSNMPDRV, *IBMPJLDRV or *HPPJLDRV. Fill in Publishing information appropriate for the Sharp MFP being installed. Press the <PgDn> key when completed.

```

Create Device Desc (Printer) (CRTDEVPRT)

Type choices, press Enter.

User-defined driver program . . *NONE      Name, *NONE
Library . . . . .             Name, *LIEL, *CURLIB
System driver program . . . . . > *IBMSNMPDRV
Publishing information:
Support duplex . . . . . > *DUPLEX      *UNKNOWN, *SIMPLEX, *DUPLEX
Support color . . . . . > *COLOR       *UNKNOWN, *NOCOLOR, *COLOR
Pages per minute black . . . . . > 55        1-32767, *UNKNOWN
Pages per minute color . . . . . > 45        1-32767, *UNKNOWN
Location . . . . . > '5th floor room 512'
Text 'description' . . . . . > 'Sharp Color & Black & White MFP MX-5500N'

Dependent location name . . . . *NONE      Name, *NONE

Additional Parameters

Remote network identifier . . . *NETATR    Name, *NETATR, *NONE

More...

F3=Exit   F4=Prompt   F5=Refresh   F12=Cancel   F13=How to use this display
F24=More keys

```

h) Since a standard Manufacturer type and model has been used for this device description (*HP8000), ensure that the Workstation customizing object field is set to *NONE.

```

Create Device Desc (Printer) (CRTDEVPRT)

Type choices, press Enter.

Workstation customizing object      *NONE      Name, *NONE
Library . . . . .                  *LIBCR    Name, *LIBL, *CURLIB
Authority . . . . .                 *LIBCR    Name, *LIBCR, *CHANGE...

Bottom
F3=Exit   F4=Prompt   F5=Refresh   F12=Cancel   F13=How to use this display
F24=More keys

```

i) Use the <PgUp> and <PgDn> keys to review all of your entries. When you are satisfied they are all correct, press the <Enter> key to create the printer device description. Assuming all information has been entered correctly, the following system message will be displayed:
Description for device {device_description_name} created. If you receive an error message at this point, press the <F9> key to recall the last command issued (CRTDEVPRT) and press the <F4> (prompt key). This will re enter all previous values for the printer device description. Be sure to press the <F9> key to display all parameters and make any corrections that are needed. Press the <Enter> key to resubmit the corrected information. If you have successfully created the printer device description but want to review the information before proceeding to the next step, type "CHGDEVPRT" (Change Device Description – Printer) at the command line and press the <F4> key. Type in the name of the printer device you just created and press the <F9> key to display all parameters. Review all information and make any corrections as needed. Press the <Enter> key and the following system message will be displayed: Description for device {device_description_name} changed.

6) Start the printer device description and the writer for the printer.

Before you can print to the Sharp MFP, the newly created printer device description as well as its associated print writer must be started. Use the steps below to prepare for printing to the MFP.

a) To start the printer device description, at a command line, type 'VRYCFG' (Vary Configuration) and press the <Enter> key. Fill in the values shown for the following fields: Configuration object > {device_description_name}, Type > *DEV and Status > *ON.

```

Vary Configuration (VRYCFG)

Type choices, press Enter.

Configuration object . . . . . > MX5500      Name, generic*, *ANYNW...
      + for more values

Type . . . . . > *DEV      *NWS, *NWI, *LIN, *CTL...
Status . . . . . > *ON      *CN, *OFF, *RESET...

F3=Exit   F4=Prompt   F5=Refresh   F12=Cancel   F13=How to use this display
F24=More keys
Parameter CFGOBJ required.

Bottom
+
```

b) Press the <Enter> key and the following system message will be displayed: Vary on completed for device {device_description_name}.

c) When the printer device description was created, a corresponding print writer object was also created with the same name. The writer must also be started before attempting to print to the MFP. In addition to outputting the data stream from the AS400 to the MFP, the writer also controls other important aspects of the printing process. Of note are two optional parameters of the Start Print Writer Command. The first, Allow direct print, controls whether non spooled files can be printed directly to the MFP. The second, Align page, determines whether a page alignment message must be answered before printing can occur. To start the writer as well as set optional parameters, type "STRPRTWTR" (Start Print Writer) at a command line and press the <F4> key. Press the <F9> to display all parameters and enter your printer device description name in the Printer field. Next, tab to the Message option field and type in *INFOMSG.

```

Start Printer Writer (STRPRTWTR)

Type choices, press Enter.

Printer . . . . . > MX5500          Name, *ALL, *SYSVAL
Output queue . . . . . *DEV          Name, *DEV
  Library . . . . .                Name, *LIEL, *CURLIB
Queue for writer messages . . . *DEVD Name, *DEVD, *REQUESTER
  Library . . . . .                Name, *LIEL, *CURLIB
Form type options:
  Form type . . . . . *ALL          Form type, *ALL, *STD, *FORMS
  Message option . . . . . > *INFOMSG *INOMSG, *MSG, *NOMSG...
File separators . . . . . *FILE      0-9, *FILE
Drawer for separators . . . . . *DEVD 1-255, *DEVD, *FILE

Additional Parameters

Writer . . . . . *DEV              Name, *DEV

More...
F3=Exit   F4=Prompt   F5=Refresh   F12=Cancel   F13=How to use this display
F24=More keys

```

d) Press the <PgDn> key and fill in the following values: Allow direct print > *YES and Align page > *File. With the Allow direct print parameter set to *YES, non-spoiled files can print directly to the MFP which can increase the output speed. The Align page parameter was originally intended for use with line printers to alert the user to position paper to the print head or to load a pre printed form before printing to ensure that data was printed in the correct position on the page. With this parameter set to *FILE and the Message option parameter set to *INFOMSG, printing can start without having to answer an alert message first.

```

                                Start Printer Writer (STRPRTWTR)

Type choices, press Enter.

Auto-end options:
  Automatically end writer . . . . *NO                *NO, *YES
  If yes, when to end . . . . . *NORDYF             *NORDYF, *FILEEND
  Allow direct print . . . . . > *YES                *NO, *YES
  Align page . . . . . > *FILE                       *FILE, *WTR, *FIRST
  Initialize printer . . . . . *WTR                  *WTR, *FIRST, *ALL
  Spooled file . . . . . *NONE                       Name, *NONE, *LAST
  Job name . . . . . *                               Name, *
  User . . . . .                                     Name
  Number . . . . .                                     000000-999999
  Spooled file number . . . . . *ONLY                1-999999, *ONLY, *LAST
  Starting page . . . . . *BEGIN                      Number, *BEGIN

                                                                    Bottom
F3=Exit   F4=Prompt   F5=Refresh   F12=Cancel   F13=How to use this display
F24=More keys

```

NOTE: Do not start the writer until the printer device description is varied on

e) Press the <Enter> key and the following system message will appear:

Reader or writer XXXXXX/QSPLJOB/{device_description_name} submitted to job queue QSPL in lib..

7) Test the printer using spooled system files.

Once the printer device description and the print writer have both been started, you can then test basic printing to the Sharp MFP using spooled system files. Changing the attributes of a spooled file allows you to change certain parameters of the file including the printer to print to, the output queue, paper source, single sided or double sided prints, etc. As the print device description you created is using the HP8000 printer description, the printed output may not be as expected. However, it will let you know whether the print device description you created is configured correctly. To test basic printing, follow the steps outlined below:

a) At a command line, type WRKSPLF (Work with All Spooled Files) and press the <Enter> key. A list of all spooled files for your user profile will be displayed as shown:

```

Work with All Spooled Files

Type options, press Enter.
  1=Send  2=Change  3=Hold  4=Delete  5=Display  6=Release  7=Messages
  8=Attributes  9=Work with printing status

Opt  File      User      Device or      User Data      Sts      Total      Cur
     File      User      Queue          User Data      Sts      Pages     Page  Copy
-   SEPPAG    PATRICK   PRT_01         PRT_01         RDY      44         1
-   SEPPAG    PATRICK   PRT_01         PRT_01         RDY      14         1
-   SEPPAGNEW PATRICK   PRT_01         PRT_01         RDY      14         1
-   QPSECQ    PATRICK   PRT_01         PRTQAUT        RDY      3          1
2   QPJOBLOG  PATRICK   QEZJOBLOG      QPADEV0005     RDY      6          1
-   QPJOBLOG  PATRICK   QEZJOBLOG      QPADEV0005     RDY      1          1
-   QPDSPJOB  PATRICK   QEZDEBUG       QEZDEBUG       RDY      7          1
-   QPSRVDMP  PATRICK   QEZDEBUG       QEZDEBUG       RDY      5          1
-   QPJOBLOG  PATRICK   QEZJOBLOG      QPADEV0005     RDY      2          1
                                           More...

Parameters for options 1, 2, 3 or command
===>
F3=Exit  F10=View 4  F11=View 2  F12=Cancel  F22=Printers  F24=More keys

```

b) Place the cursor in the Opt (Option) field for the file you wish to print and type "2" (change) and press the <Enter> key. Then press the <F9> key to display all of the parameters of the spooled file. Tab to the Printer field and enter the name of your printer device description.

```

Change Spooled File Attributes (CHGSPLFA)

Type choices, press Enter.

Spooled file . . . . . > QPJOBLOG      Name, *SELECT
Job name . . . . . > QPADEV0005      Name, *
  User . . . . . > PATRICK          Name
  Number . . . . . > 043388         000000-999999
Spooled file number . . . . . > 1    1-999999, *ONLY, *LAST
Select files for:
  User . . . . . *CURRENT          Name, *CURRENT, *ALL
  Print device . . . . . *ALL       Name, *ALL, *OUTQ
  Form type . . . . . *ALL         Form type, *ALL, *STD
  User data . . . . . *ALL         User data, *ALL
Printer . . . . . > MX5500         Name, *SAME, *OUTQ
Print sequence . . . . . *SAME      *SAME, *NEXT
Form type . . . . . *STD           Form type, *SAME, *STD
Copies . . . . . 1                1-255, *SAME
Restart printing . . . . . *STRPAGE Number, *SAME, *STRPAGE...
Volume . . . . . *SAME            Identifier, *SAME, *NCNE
                                           More...

F3=Exit  F4=Prompt  F5=Refresh  F12=Cancel  F13=How to use this display
F24=More keys

```

c) Press the <PgDn> and enter "*DEV" in the Output queue field. Tab to the Save file field and type in *YES so this file can be used for printing again.

```

Change Spooled File Attributes (CHGSPLFA)

Type choices, press Enter.

Diskette label . . . . . *SAME          Character value, *SAME

Additional Parameters

Output queue . . . . . > *DEV          Name, *SAME, *DEV
Library . . . . .                               Name, *LIBL, *CURLIB
File separators . . . . . 0              0-9, *SAME
Page range to print:
  Starting page . . . . . 1              Number, *SAME, *ENDPAGE
  Ending page . . . . . *END             Number, *SAME, *END
File becomes available . . . . . *FILEEND *SAME, *JOBEND, *FILEEND...
Save file . . . . . > *YES              *SAME, *NO, *YES
Output priority . . . . . 5              1-9, *SAME, *JOB
User data . . . . . 'QPADEV0005'        User data, *SAME
Align page . . . . . *NO                 *SAME, *NO, *YES
Print quality . . . . . *STD              *SAME, *STD, *DEVD, *DRAFT...
                                          More...

F3=Exit   F4=Prompt   F5=Refresh   F12=Cancel   F13=How to use this display
F24=More keys
  
```

d) Press the <Enter> key to submit the spool file to your print device description and you will be returned to the Work with All Spool Files screen. The job you submitted to your printer will display a status of “*CHG” (changed).

```

Work with All Spooled Files

Type options, press Enter.
  1=Send   2=Change   3=Hold   4=Delete   5=Display   6=Release   7=Messages
  8=Attributes   9=Work with printing status

Opt  File           User           Device or      User Data     Sts   Total  Cur   Copy
     SEPPAG         PATRICK        PRT_01         PRTQAUT       RDY   44     Page  1
     SEPPAG         PATRICK        PRT_01         RDY            14    1
     SEPPAGNEW      PATRICK        PRT_01         RDY            14    1
     QPSECQ         PATRICK        PRT_01         PRTQAUT       RDY    3     1
     QPJOBLOG       PATRICK        MX5500         QPADEV0005   *CHG    6     1
     QPJOBLOG       PATRICK        QEZJOBLOG      QPADEV0005   RDY    1     1
     QPDSPJOB       PATRICK        QEZDEBEG      RDY            7     1
     QPSRVDMP       PATRICK        QEZDEBEG      RDY            5     1
     QPJOBLOG       PATRICK        QEZJOBLOG      QPADEV0005   RDY    2     1
                                          More...

Parameters for options 1, 2, 3 or command
===>
F3=Exit   F10=View 4   F11=View 2   F12=Cancel   F22=Printers   F24=More keys
  
```

e) To check the status of the job you just submitted, press the <F5> key several times to refresh the screen. If the Sts (Status) field changes to “MSGW” (Message Waiting), a response to the message or a

corrective action on the MFP is required before printing can occur. Type "7" in the Opt field to display the message.

```

Work with All Spooled Files

Type options, press Enter.
  1=Send  2=Change  3=Hold  4=Delete  5=Display  6=Release  7=Messages
  8=Attributes  9=Work with printing status

Opt  File      User      Device or      User Data      Sts  Total  Cur
     File      User      Queue          User Data      Sts  Pages Page Copy
  7  QPJOBLOG  PATRICK  MX5500         QPADEV0005    MSGW   6      1
  -  SEPPAG    PATRICK  PRT_01         RDY          44     1
  -  SEPPAG    PATRICK  PRT_01         RDY          14     1
  -  SEPPAGNEW PATRICK  PRT_01         RDY          14     1
  -  QPSECQ    PATRICK  PRT_01         PRTQAUT      RDY     3     1
  -  QPJOBLOG  PATRICK  QEZJOBLOG      QPADEV0005    RDY     1     1
  -  QPDSPJOB  PATRICK  QEZDEBUG       RDY          7     1
  -  QPSRVDMP  PATRICK  QEZDEBUG       RDY          5     1
  -  QPJOBLOG  PATRICK  QEZJOBLOG      QPADEV0005    RDY     2     1
                                           More...

Parameters for options 1, 2, 3 or command
===>
F3=Exit  F10=View 4  F11=View 2  F12=Cancel  F22=Printers  F24=More keys
  
```

f) The following screen shows the message you will receive if the Align page parameter is not set to *FILE in the STRPRTWTR (Start Printer Writer) command.

```

Additional Message Information

Message ID . . . . . : CPA3394      Severity . . . . . : 99
Message type . . . . . : Inquiry
Date sent . . . . . : 09/04/08     Time sent . . . . . : 10:53:46

Message . . . . . : Load form type '*STD' device MX5500 writer MX5500. (G B I
H R C)
Cause . . . . . : The file on output queue MX5500 in library QUSRSYS
requires form type '*STD' to be loaded on device MX5500. The form type for
the file was all blanks when ' ' appears as the form type.
Possible choices for replying to message . . . . . :
G -- Begin processing the current file after loading the form type.
B -- Begin processing the current file after loading and aligning the form
type (no alignment message is sent - same as option 1 on System/36).
I -- Ignore the request to load the form type. Print the file on the
current formtype (same as option 0 on System/36).
                                           More...

Type reply below, then press Enter.
Reply . . . . . _____

F3=Exit  F6=Print  F9=Display message details  F12=Cancel
F21=Select assistance level
  
```

g) The message in this case is an alert to load a form into the printer and requires a response to the message before printing can commence. Additional information may be displayed by pressing the <PgDn> key. The possible reply to this message is G, B, I, H, R and C.

Additional Message Information

```

Message ID . . . . . : CPA3394      Severity . . . . . : 99
Message type . . . . . : Inquiry

H -- Hold the file and print the next file on the output queue.
R -- Search the output queue for the first available file with the correct
   form type. Reply value R is useful after using the Change Writer (CHGWTR)
   command to change the form type or the output queue of the writer.
   *FILEEND must be specified for the option (OPTION) parameter on the CHGWTR
   command for the change to take effect.
C -- Cancel the writer (same as option 2 on System/36).

Type reply below, then press Enter.
Reply . . . . . I

F3=Exit  F6=Print  F9=Display message details  F12=Cancel
F21=Select assistance level
    
```

Bottom

h) No action is required at the MFP as this is an alert and not a critical error. Print output will continue once a reply is sent to the message. For this type of message, type "I" (Ignore) in the Reply field and press the <Enter> key. Other messages indicating a problem with the MFP (out of paper, off line, out of toner) require no response and printing will start automatically after the required action is taken on the MFP.

Work with All Spooled Files

```

Type options, press Enter.
 1=Send  2=Change  3=Hold  4=Delete  5=Display  6=Release  7=Messages
 8=Attributes  9=Work with printing status

Opt  File      User      Device or  User Data  Sts  Total  Cur
     File      User      Queue     Data       Sts  Pages Page Copy
  9  QPJOBLOG  PATRICK  MX5500    QPADEV0005 MSGW  6     1
  -  SEPPAG    PATRICK  PRT_01                    RDY  44    1
  -  SEPPAG    PATRICK  PRT_01                    RDY  14    1
  -  SEPPAGNEW PATRICK  PRT_01                    RDY  14    1
  -  QPSECQ    PATRICK  PRT_01    PRTQAUT   RDY  3     1
  -  QPJOBLOG  PATRICK  QEZJOBLOG QPADEV0005 RDY  1     1
  -  QPDSJOB   PATRICK  QEZDEBEG  RDY  7     1
  -  QPSRVDMP  PATRICK  QEZDEBEG  RDY  5     1
  -  QPJOBLOG  PATRICK  QEZJOBLOG QPADEV0005 RDY  2     1
                                           More...

Parameters for options 1, 2, 3 or command
====>
F3=Exit  F10=View 4  F11=View 2  F12=Cancel  F22=Printers  F24=More keys
    
```

i) When the following screen is displayed, press the <F5> key several times to refresh the status of the job.

```

                                Work with Printing Status

Job . . . . . : QPADEV0005      File . . . . . : QPJOBLOG
User . . . . . : PATRICK        Number . . . . . : 1
Number . . . . . : 043388      User data . . . . . : QPADEV0005

Type options, press Enter.
  2=Change status   5=Display detailed description

Opt   Status Description
  _   (Status is pending)

                                Bottom

Command
===> _____
F3=Exit  F4=Prompt  F5=Refresh  F9=Retrieve  F12=Cancel

```

j) If no message is generated, the status should show that the job was printed and saved as the *SAVE option was selected in the spool file attributes. If a different status is shown ("This file is not associated with a started printer" for instance), ensure that the printer device was varied on and the print writer was started.

```

                                Work with Printing Status

Job . . . . . : QPADEV0005      File . . . . . : QPJOBLOG
User . . . . . : PATRICK        Number . . . . . : 1
Number . . . . . : 043388      User data . . . . . : QPADEV0005

Type options, press Enter.
  2=Change status   5=Display detailed description

Opt   Status Description
  _   This file was printed and saved.

                                Bottom

Command
===> _____
F3=Exit  F4=Prompt  F5=Refresh  F9=Retrieve  F12=Cancel

```

Check the MFP and ensure that the job printed out. If letter sized paper was not loaded in Tray 2, the print job will be in the MFPs job queue displaying a message to load letter size paper. Since this printer used the

*HP8000 description file, the job just printed should have been printed in simplex mode from Tray 2 even though the job attributes show that Tray 1 was selected for paper feed.. This is because there are some differences between the Sharp and HP specific PCL printer commands. While this might work for users who require only basic printing, other users might require other features such as duplex printing from a different feed tray. To test whether the print device description needs to include a Workstation Customizing Object for the user, we will make further changes to the same spooled file and reprint the job.

k) If you are still on the Work with Printing Status screen, press the <Enter> key to return to the Work with All Spooled Files screen. Otherwise, type "WRKSPLF" at a command line. Then type "2" into the Opt field of the file just printed and press the <Enter> key.

```

Work with All Spooled Files

Type options, press Enter.
  1=Send  2=Change  3=Hold  4=Delete  5=Display  6=Release  7=Messages
  8=Attributes  9=Work with printing status

Opt  File      User      Device or
     File      User      Queue     User Data  Sts  Total  Cur
     File      User      Queue     User Data  Sts  Pages Page Copy
-----
  2  QPJOBLOG  PATRICK  MX5500    QPADEV0005 SAV   6      1
  -  SEPPAG    PATRICK  PRT_01                    RDY   44     1
  -  SEPPAG    PATRICK  PRT_01                    RDY   14     1
  -  SEPPAGNEW PATRICK  PRT_01                    RDY   14     1
  -  QPSECQ    PATRICK  PRT_01    PRTQAUT    RDY   3      1
  -  QPJOBLOG  PATRICK  QEZJOBLOG QPADEV0005 RDY   1      1
  -  QPDSPJOB  PATRICK  QEZDEBUG  RDY   7      1
  -  QPSRVDMP  PATRICK  QEZDEBUG  RDY   5      1
  -  QPJOBLOG  PATRICK  QEZJOBLOG QPADEV0005 RDY   2      1
                                           More...

Parameters for options 1, 2, 3 or command
===>
F3=Exit  F10=View 4  F11=View 2  F12=Cancel  F22=Printers  F24=More keys

```

l) Press the <F9> key to display all parameters. Press the <PgDn> key twice to access the following screen. Tab to the Source drawer field and change the default value from "1" to "2" to feed from the second cassette. Next, Tab to the Print on both sides field and change the default value from *NO to *YES. Before proceeding, remove paper from Tray 2 on the Sharp MFP and ensure that letter size paper is placed in Tray 1.

```

Change Spooled File Attributes (CHGSPLFA)

Type choices, press Enter.

Form feed . . . . . *DEV D      *SAME, *DEV D, *CONT, *CUT...
Source drawer . . . . . > 2      1-255, *SAME, *E1, *FORMDF
Print fidelity . . . . . *CONTENT *SAME, *ABSOLUTE, *CONTENT
Print on both sides . . . . . > *YES *SAME, *NO, *YES, *TUMBLE...
Pages per side . . . . . 1      1-4, *SAME
Page definition . . . . . *SAME  Name, *SAME, *NONE
Library . . . . .           Name, *LIEL, *CURLIB
Form definition . . . . . *NONE  Name, *SAME, *NONE, *DEV D...
Library . . . . .           Name, *LIEL, *CURLIB
AFP Characters . . . . . *SAME  Coded font name, *SAME, *NONE
Front side overlay:
  Overlay . . . . . *NONE      Name, *NONE, *SAME
  Library . . . . .           Name, *LIEL, *CURLIB
  Offset down . . . . .       0.00-57.79, *SAME
  Offset across . . . . .     0.00-57.79, *SAME

More...

F3=Exit  F4=Prompt  F5=Refresh  F12=Cancel  F13=How to use this display
F24=More keys
  
```

m) After ensuring that the Sharp MFP is setup as described, submit the changes to the spooled file by pressing the <Enter> key. Next, type "9" (Printing status) in the Opt field of the job and press the <Enter> key.

```

Work with All Spooled Files

Type options, press Enter.
  1=Send  2=Change  3=Hold  4=Delete  5=Display  6=Release  7=Messages
  8=Attributes  9=Work with printing status

Opt  File      User      Device or      User Data  Sts  Total  Cur
     QPSECQ    PATRICK   M3 55N        PRTQAUT    SAV   2      Page Copy
     QPSUPRTF  PATRICK   MX5500Q      corrected  SAV   12     1
     QPSUPRTF  PATRICK   MX5500Q      corrected  SAV   12     1
  9  QPJOBLOG  PATRICK   MX5500        QPADEV0005 *CHG   6      1

Bottom

Parameters for options 1, 2, 3 or command
===>
F3=Exit  F10=View 4  F11=View 2  F12=Cancel  F22=Printers  F24=More keys
  
```

n) Type "2" (Change status) in the Opt field and press the <Enter> key. When the Change Status window appears, type "1" in the Selection field and press the <Enter> key to resubmit the job for printing. After the job is printed, press the <F12> (Cancel) key to

return to the Work with All Spooled Files screen.

```

                                Work with Printing Status
Job . . . . . : QPADEV0005      File . . . . . : QPJOBLOG
User . . . . . : PATRICK        Number . . . . . : 1
Number . . . . . : 043388      User data . . . . . : QPADEV0005

Type options, press Enter.
  2=Change status   5=Display detailed description

Opt :
  2 :                               Change Status
   :                               :
   : Select one of the following:  :
   :                               :
   :   1. Print this file and save it again
   :   2. Print this file and delete it
   :                               :
   :                               :
   : Selection                      :
   :   1                             :
Com :
=== : F6=Display details   F12=Cancel
F3= :
  
```

If you have followed the instructions correctly, you will find that the job printed on both sides of the page from Tray 1 rather than Tray 2 as expected. This indicates that a Workstation Customizing Object should be used with the print device description. A workstation customization object (WSCST) is a modification of a standard manufacturer type and model description supplied with the operating system. The following example shows using a pre compiled WSCST in place of the *HP8000 type and model description. (For complete instructions on creating and modifying WSCSTs, see the document "Creating and Compiling WSCST for Sharp MFPs on the AS400")

8) Apply a Workstation Customizing Object to the Print device description.

a) Before a print device description can be modified, the print writer must be stopped and the printer device description varied off. At a command line, type "ENDWTR" and press the <F4> key. Type in the name of your print device description in the Writer field, tab to the When to end writer field, type in "*IMMED".

```

                                End Writer (ENDWTR)

Type choices, press Enter.

Writer . . . . . > MX5500          Name, *SYSVAL, *ALL
When to end writer . . . . . > *IMMED      *CNTRLD, *IMMED, *PAGEEND

                                                                 Bottom
F3=Exit   F4=Prompt   F5=Refresh   F12=Cancel   F13=How to use this display
F24=More keys
    
```

b) Press the <Enter> key to end the writer.

```

MAIN                                OS/400 Main Menu                                System:  AS400

Select one of the following:

    1. User tasks
    2. Office tasks

    4. Files, libraries, and folders

    6. Communications

    8. Problem handling
    9. Display a menu

   11. Client Access/400 tasks

   90. Sign off

Selection or command
===> _____

F3=Exit   F4=Prompt   F9=Retrieve   F12=Cancel   F23=Set initial menu

Writer 044419/QSPLJOB/MX5500 in process of ending.
    
```

c) Next, at the command line, type "VRYCFG" and press the <Enter> key. Fill in the values shown for the following fields: Configuration object > {printer device_description_name}, Type > *DEV and Status > *OFF.

```

                                Vary Configuration (VRYCFG)

Type choices, press Enter.

Configuration object . . . . . > MX5500      Name, generic*, *ANYNW...
                                + for more values
Type . . . . . > *DEV                        *NWS, *NWI, *LIN, *CTL...
Status . . . . . > *OFF                      *CN, *OFF, *RESET...

                                                                Bottom
F3=Exit   F4=Prompt   F5=Refresh   F12=Cancel   F13=How to use this display
F24=More keys
Parameter CFGOBJ required.
    
```

d) Press the <Enter> key to vary off the printer device description.

```

MAIN                                OS/400 Main Menu                                System:   AS400

Select one of the following:

    1. User tasks
    2. Office tasks

    4. Files, libraries, and folders

    6. Communications

    8. Problem handling
    9. Display a menu

   11. Client Access/400 tasks

   90. Sign off

Selection or command
====> _____

F3=Exit   F4=Prompt   F9=Retrieve   F12=Cancel   F23=Set initial menu

Vary off completed for device MX5500.
    
```

e) At the command line, type "CHGDEVPRT", press the <F4> key and then enter in name of the printer device. Press the <F9> key to display all of the parameters for the print device description. Press the <PgDn> key twice, tab to the Manufacturer type and model field and enter "*WSCST".

```

Change Device Desc (Printer) (CHGDEVPRT)

Type choices, press Enter.

Host signon/logon command . . . *SAME

Pacing . . . . . *SAME          1-7, *SAME
Line speed . . . . . 19200        *SAME, *TYPE, 150, 300...
Word length . . . . . 8          *SAME, *TYPE, 7, 8
Type of parity . . . . . *NONE    *SAME, *TYPE, *EVEN, *ODD...
Stop bits . . . . . 1           *SAME, *TYPE, 1, 2
Host print transform . . . . . *YES  *SAME, *NO, *YES
Manufacturer type and model . . *WCSST
Paper source 1 . . . . . *LETTER  *SAME, *MFRTYPMDL, *LETTER...
Paper source 2 . . . . . *LETTER  *SAME, *MFRTYPMDL, *LETTER...
Envelope source . . . . . *NONE   *SAME, *MFRTYPMDL...
ASCII code page 899 support . . *NO    *SAME, *NO, *YES
Image configuration . . . . . *NONE  *SAME, *NONE, *IMGA01...
More...

F3=Exit  F4=Prompt  F5=Refresh  F12=Cancel  F13=How to use this display
F24=More keys
    
```

f) Press the <PgDn> key 3 times, tab to the Workstation Customizing object field and enter "ALLSHARP" (or the name of an existing, compiled WSCST). Tab to the Library field and enter "QGPL" as this is the default location for compiled WSCSTs.

```

Change Device Desc (Printer) (CHGDEVPRT)

Type choices, press Enter.

Publishing information:
Support duplex . . . . . *DUPLEX  *SAME, *SIMPLEX, *DUPLEX...
Support color . . . . . *COLOR    *SAME, *NOCOLOR, *COLOR...
Pages per minute black . . . . 55    1-32767, *SAME, *UNKNOWN
Pages per minute color . . . . 45    1-32767, *SAME, *UNKNOWN
Location . . . . . *BLANK
Text 'description' . . . . . 'SHARP Color & Black & White MFP MX-5500N'

Additional Parameters

Remote network identifier . . . *SAME    Name, *SAME, *NETATR, *NONE
Workstation customizing object > ALLSHARP  Name, *SAME, *NONE
Library . . . . . > QGPL                Name, *LIEL, *CURLIB

Bottom

F3=Exit  F4=Prompt  F5=Refresh  F12=Cancel  F13=How to use this display
F24=More keys
    
```

g) Press the <Enter> key to apply the changes to the printer device description.

```

MAIN                               OS/400 Main Menu                               System:  AS400

```

Select one of the following:

- 1. User tasks
- 2. Office tasks
- 4. Files, libraries, and folders
- 6. Communications
- 8. Problem handling
- 9. Display a menu
- 11. Client Access/400 tasks
- 90. Sign off

Selection or command

===> _____

F3=Exit F4=Prompt F9=Retrieve F12=Cancel F23=Set initial menu

Description for device MX5500 changed.

h) The printer device description must be restarted (varied on) after applying the work station customizing object. At the command line, type 'VRYCFG' (Vary Configuration) and press the <Enter> key. Fill in the values shown for the following fields: Configuration object > {device_description_name}, Type > *DEV and Status > *ON. Press the <Enter> key to vary on the printer.

Vary Configuration (VRYCFG)

Type choices, press Enter.

```

Configuration object . . . . . > MX5500      Name, generic*, *ANYNW...
      + for more values
Type . . . . . > *DEV                        *NWS, *NWI, *LIN, *CTL...
Status . . . . . > *ON                       *CN, *OFF, *RESET...

```

```

                                                                 Bottom
F3=Exit  F4=Prompt  F5=Refresh  F12=Cancel  F13=How to use this display
F24=More keys
Parameter CFGOBJ required.

```

i) As with the printer device description, the printer writer must also be restarted. (NOTE: When the writer is ended and restarted, all of its parameters will be reset to defaults.) Type "STRPRTWTR" (Start Print Writer) at a command line and press the <F4> key. Press the <F9> to display all parameters and enter your printer device description name in the Printer field and *INFOMSG in the Message option field.

```

Start Printer Writer (STRPRTWTR)

Type choices, press Enter.

Printer . . . . . > MX5500          Name, *ALL, *SYSVAL
Output queue . . . . . *DEV         Name, *DEV
  Library . . . . .                Name, *LIBL, *CURLIB
Queue for writer messages . . . . . *DEV    Name, *DEV, *REQUESTER
  Library . . . . .                Name, *LIBL, *CURLIB
Form type options:
  Form type . . . . . *ALL          Form type, *ALL, *STD, *FORMS
  Message option . . . . . > *INFOMSG *INQMSG, *MSG, *NOMSG...
File separators . . . . . *FILE      0-9, *FILE
Drawer for separators . . . . . *DEV   1-255, *DEV, *FILE

Additional Parameters

Writer . . . . . *DEV              Name, *DEV

More...

F3=Exit  F4=Prompt  F5=Refresh  F12=Cancel  F13=How to use this display
F24=More keys
    
```

j) Press the <PgDn> key and set Allow direct print to *YES and Align page to *File. Press the <Enter> to start the writer.

```

Start Printer Writer (STRPRTWTR)

Type choices, press Enter.

Auto-end options:
  Automatically end writer . . . . . *NO          *NO, *YES
  If yes, when to end . . . . . *NORDYF        *NORDYF, *FILEEND
  Allow direct print . . . . . > *YES          *NO, *YES
  Align page . . . . . > *FILE                *FILE, *WTR, *FIRST
Initialize printer . . . . . *WTR            *WTR, *FIRST, *ALL
Spooled file . . . . . *NCNE                Name, *NCNE, *LAST
Job name . . . . . *                        Name, *
  User . . . . .                            Name
  Number . . . . .                          000000-999999
Spooled file number . . . . . *ONLY          1-999999, *ONLY, *LAST
Starting page . . . . . *BEGIN                Number, *BEGIN

Bottom

F3=Exit  F4=Prompt  F5=Refresh  F12=Cancel  F13=How to use this display
F24=More keys
    
```

k) At the command line, type "WRKSPLF". When the list of spooled files is displayed, type "9" (Printing status) in the Opt field of the same file you printed previously and press the <Enter> key.

```

                                Work with All Spooled Files

Type options, press Enter.
  1=Send  2=Change  3=Hold  4=Delete  5=Display  6=Release  7=Messages
  8=Attributes      9=Work with printing status

Opt  File          User          Device or      User Data      Sts   Total   Cur
     QPSECQ        PATRICK      M3 55N        PRTQAUT        SAV   2       Page  Copy
     QPSUPRTF      PATRICK      MX5500Q       corrected      SAV   12      1
     QPSUPRTF      PATRICK      MX5500Q       corrected      SAV   12      1
     9 QPJOBLOG     PATRICK      MX5500        QPADEV0005     SAV   6       1

                                                                Bottom

Parameters for options 1, 2, 3 or command
===> _____
F3=Exit  F10=View 4  F11=View 2  F12=Cancel  F22=Printers  F24=More keys
  
```

l) Next, type "2" (Change status) in the Opt field and press the <Enter> key. Type "1" in the Selection field and press the <Enter> key to resubmit the job for printing. After the job is printed, press the <F12> (Cancel) key and then the <Enter> key.

```

                                Work with Printing Status

Job . . . . . : QPADEV0005      File . . . . . : QPJOBLOG
User . . . . . : PATRICK        Number . . . . . : 1
Number . . . . . : 043388      User data . . . . . : QPADEV0005

Type options, press Enter.
  2=Change status  5=Display detailed description

Opt : _____ Change Status _____
  2 :
   : Select one of the following:
   :
   :   1. Print this file and save it again
   :   2. Print this file and delete it
   :
   : Selection
   :   1
Com :
=== : F6=Display details  F12=Cancel
F3= :
  
```

m) Check the job status of the Sharp MFP. If you left the MFP in the same condition as the previous print job, you will now find that the MFP will be displaying a message to "Add paper to Tray 2". After adding 8 1/2 x 11 paper into Tray 2, the job will then print from Tray 2, indicating that the source drawer commands are now customized correctly for the Sharp MFP. Again, the printed documents should be printed on both sides.

9) Set the print device description for the Sharp MFP as the user's default printer.

Typically, most AS400 print jobs are sent to a spool rather than directly to a printer. This allows further formatting of the file or allows the job to be redirected to a different output device. However, for some users and jobs, it is more efficient to directly print out the job on a known printer. In a large network environment with multiple printers, users are assigned default printers by their administrator. If they have sufficient rights, users can assign a printer to themselves. Both methods are shown below:

Administrative Method

a) Log into the AS400 with the administrator account. At the command line, type CHGUSRPRF and press the <F4> key. Type in the user account name and press the <F9> key to display all of the parameters.

```

Change User Profile (CHGUSRPRF)

Type choices, press Enter.

User profile . . . . . > JERRY          Name
User password . . . . . *SAME          Character value, *SAME, *NONE
Set password to expired . . . . . *NO   *SAME, *NO, *YES
Status . . . . . *ENABLED             *SAME, *ENABLED, *DISABLED
User class . . . . . *SECOFR           *SAME, *USER, *SYSOPR...
Assistance level . . . . . *ADVANCED   *SAME, *SYSVAL, *BASIC...
Current library . . . . . *CRTDFT      Name, *SAME, *CRTDFT
Initial program to call . . . . . *NONE Name, *SAME, *NONE
Library . . . . .                   Name, *LIBL, *CURLIB
Initial menu . . . . . MAJOR          Name, *SAME, *SIGNOFF
Library . . . . . *LIBL              Name, *LIBL, *CURLIB
Limit capabilities . . . . . *NO       *SAME, *NO, *PARTIAL, *YES
Text 'description' . . . . . 'Privileged User'

More...
F3=Exit   F4=Prompt   F5=Refresh   F12=Cancel   F13=How to use this display
F24=More keys
    
```

b) Press the <PgDn> key twice. For the Print device type in the name of the print device description desired for the user and *DEV for the Output queue fields. Press the <Enter> key when done.

```

Change User Profile (CHGUSRPRF)

Type choices, press Enter.

Owner . . . . . *USRPRF          *SAME, *USRPRF, *GRPPRF
Group authority . . . . . *ALL          *SAME, *NONE, *ALL...
Group authority type . . . . . *PRIVATE      *PRIVATE, *PGP, *SAME
Supplemental groups . . . . . *NONE          Name, *SAME, *NONE
      + for more values
Accounting code . . . . . *BLANK
Document password . . . . . *SAME          Name, *SAME, *NONE
Message queue . . . . . JERRY          Name, *SAME, *USRPRF
  Library . . . . . QUSRSYS          Name, *LIBL, *CURLIB
Delivery . . . . . *NOTIFY          *SAME, *NOTIFY, *BREAK...
Severity code filter . . . . . 0          0-99, *SAME
Print device . . . . . > MX5500          Name, *SAME, *WRKSTN, *SYSVAL
Output queue . . . . . > *DEV          Name, *SAME, *WRKSTN, *DEV
  Library . . . . .          Name, *LIBL, *CURLIB
Attention program . . . . . *SYSVAL          Name, *SAME, *SYSVAL...
  Library . . . . .          Name, *LIBL, *CURLIB
                                                    More...

F3=Exit   F4=Prompt   F5=Refresh   F12=Cancel   F13=How to use this display
F24=More keys

```

c) The user has now been assigned the print device description as his default printer when the following system message appears.

User profile {username} changed.

```

MAJOR                               Major Command Groups                               System:   AS400

Select one of the following:

1. Select Command by Name           SLTCMD
2. Verb Commands                   VERB
3. Subject Commands                 SUBJECT
4. Object Management Commands      CMDOBJMGT
5. File Commands                   CMDFILE
6. Save and Restore Commands       CMDSAVRST
7. Work Management Commands        CMDWRKMGT
8. Data Management Commands       CMDDTAMGT
9. Security Commands               CMDSEC
10. Print Commands                 CMDPRT
11. Spooling Commands              CMDSPL
12. System Control Commands        CMDSYSCTL
13. Program Commands               CMDPGM
                                                    More...

Selection or command
===> _____

F3=Exit   F4=Prompt   F9=Retrieve   F12=Cancel   F13=Information Assistant
F16=AS/400 Main menu
User profile JERRY changed.

```

User Method

a) Log into the AS400 with your user account. Type CHGPRF on the command line and press the <F4> key. Press the <F9> key to display all parameters

```

Change Profile (CHGPRF)

Type choices, press Enter.

Assistance level . . . . . *SYSVAL      *SAME, *SYSVAL, *BASIC...
Current library . . . . . *CRTDFT      Name, *SAME, *CRTDFT
Initial program to call . . . . *NCNE      Name, *SAME, *NCNE
  Library . . . . .      Name, *LIBL, *CURLIB
Initial menu . . . . . MAIN      Name, *SAME, *SIGNOFF
  Library . . . . . *LIBL      Name, *LIBL, *CURLIB
Text 'description' . . . . . 'Privileged user'

Additional Parameters

Keyboard buffering . . . . . *SYSVAL      *SAME, *SYSVAL, *NO...
Job description . . . . . QDFTJOB      Name, *SAME
  Library . . . . . QGPL      Name, *LIBL, *CURLIB
Document password . . . . . *SAME      Name, *SAME, *NCNE

More...

F3=Exit  F4=Prompt  F5=Refresh  F12=Cancel  F13=How to use this display
F24=More keys
    
```

b) Press the <PgDn> key once. For the Print device type in the name of the print device description desired for the user and *DEV for the Output queue fields. Press the <Enter> key when done.

```

Change Profile (CHGPRF)

Type choices, press Enter.

Message queue . . . . . > PATRICK      Name, *SAME, *USRPRF
  Library . . . . . > QUSRSYS      Name, *LIBL, *CURLIB
Delivery . . . . . *NOTIFY      *SAME, *NOTIFY, *BREAK...
Severity code filter . . . . . 0      0-99, *SAME
Print device . . . . . > MX5500      Name, *SAME, *WRKSTN, *SYSVAL
Output queue . . . . . > *DEV      Name, *SAME, *WRKSTN, *DEV
  Library . . . . .      Name, *LIBL, *CURLIB
Attention program . . . . . *SYSVAL      Name, *SAME, *NCNE...
  Library . . . . .      Name, *LIBL, *CURLIB
Sort sequence . . . . . *SYSVAL      Name, *SAME, *SYSVAL, *HEX...
  Library . . . . .      Name, *LIBL, *CURLIB
Language ID . . . . . *SYSVAL      *SAME, *SYSVAL...
Country ID . . . . . *SYSVAL      *SAME, *SYSVAL...
Coded character set ID . . . . . *SYSVAL      *SAME, *SYSVAL, *HEX...
Character identifier control . . *SYSVAL      *SAME, *SYSVAL, *DEVD...

More...

F3=Exit  F4=Prompt  F5=Refresh  F12=Cancel  F13=How to use this display
F24=More keys
    
```

d) You have assigned the print device description as your default printer when the following system message appears:

User profile {your name} changed.

```

MAIN                                OS/400 Main Menu                                System:  AS400

Select one of the following:

    1. User tasks
    2. Office tasks

    4. Files, libraries, and folders

    6. Communications

    8. Problem handling
    9. Display a menu

    11. Client Access/400 tasks

    90. Sign off

Selection or command
====> _____

F3=Exit   F4=Prompt   F9=Retrieve   F12=Cancel   F13=Information Assistant
F16=AS/400 Main menu
User profile PATRICK changed.

```

Test user's default printer with application printing

To ensure that the print device description has been assigned to your user account, you will need to select an application that allows you to print directly print to the printer. For this exercise, use the Source Entry Utility as it allows source code to be printed as an option. Note that the printer file used for this has been modified so that the job will be printed in duplex mode from Tray 1 and the print job will be printed and saved as a spooled file. Use the following procedure to test your user account:

a) At the command line, type in STRSEU (Start Source Entry Utility) and press the <F4> key. Fill in the following values for the parameters shown: Source file: > QTXTSRC, Library:> QGPL, Source member > *SELECT and Source type: > TXT. Press the <Enter > key when done:

```

Start Source Entry Utility (STRSEU)

Type choices, press Enter.

Source file . . . . . > QTXTSRC      Name, *PRV
Library . . . . . > QGPL           Name, *LIBL, *CURLIB, *PRV
Source member . . . . . > *SELECT   Name, *PRV, *SELECT
Source type . . . . . > TXT         Name, *SAME, BAS, BASP...
Option . . . . . *BLANK             *BLANK, ' ', 2, 5, 6
Text 'description' . . . . . *BLANK

F3=Exit   F4=Prompt   F5=Refresh   F12=Cancel   F13=How to use this display
F24=More keys
Bottom

```

b) A list of text source code files for Workstation Customizing Objects will be shown similar to the following screen. Type "6" (Print) in the Opt field for any of the files and press the <Enter> key.

```

Work with Members Using SEU

Source file . . . . . QTXTSRC      Library . . . . . QGPL
Position to . . . . .
New member . . . . .
Type for new member . . . . . TXT
Text . . . . .

Type options, press Enter.
2=Edit   4=Delete   5=Browse   6=Print

Opt Member      Type      Text
6 ALLSHARP      Master template source code for Sharp MFPS
- ARM3 55MFP1   Source code modified from HP8000
- AR275N       AR275 source code
- BOB         Custom folder for 'bob'
- CDRAGON1     Color Dragon
- CDRAGON2     Color Dragon with Finisher
- CUSTFLDR     CUSTOM FOLDER
- DUP         Master template source code for Sharp MFPS
More...

F3=Exit   F5=Refresh   F12=Cancel   F14=Display date
F15=Sort by date   F17=Subset

Member ALLSHARP has been printed.

```

c) If all information has been entered correctly, the selected file will print directly to your default printer using the print device description you created. The job will be formatted, printed and saved in the spooler using the options selected in the printer file for this job.

(For more information on using AS400 printer files, see the document "Modifying AS400 Printer Files for use with Sharp MFPs"). Press the <F3> key to exit the source entry utility. A sample of the printout is shown below:

```

5722WDS V5R1M0 010525          SEU SOURCE LISTING
SOURCE FILE . . . . . QGPL/QTEXTSRC
MEMBER . . . . . ALLSHARP
SEQR*..... 1 ..... 2 ..... 3 ..... 4 ..... 5 ..... 6 ..... 7
100 :WSCST DEVCLASS=TRANSFORM.  /** SHARP GENERIC WSCST **/
200 /** MODIFY AS NEEDED FOR SPECIFIC MODELS **/
300 :TRNSFRMTBL.
400 :PRDTASTRM
500 DATASTREAM=HPPCL5.
600 :NOPRTBDR
700 OPTION=TOP
800 ORIENT=PORTRAIT
900 DATA = 240.
1000 :NOPRTBDR
1100 OPTION=LEFT
1200 ORIENT=PORTRAIT
1300 DATA = 360.
1400 :NOPRTBDR
1500 OPTION=RIGHT
1600 ORIENT=PORTRAIT
1700 DATA = 360.
1800 :NOPRTBDR
1900 OPTION=BOTTOM
2000 ORIENT=PORTRAIT
2100 DATA = 240.
2200 :NOPRTBDR
2300 OPTION=TOP
2400 ORIENT=LANDSCAPE
2500 DATA = 240.
2600 :NOPRTBDR
2700 OPTION=LEFT
2800 ORIENT=LANDSCAPE
2900 DATA = 288.
3000 :NOPRTBDR
3100 OPTION=RIGHT
3200 ORIENT=LANDSCAPE
3300 DATA = 288.
3400 :NOPRTBDR
3500 OPTION=BOTTOM
3600 ORIENT=LANDSCAPE
3700 DATA = 240.
3800 :INITPRT
3900 DATA = '1B45'X.
4000 :RESETPRT
4100 DATA = '1B45'X.
4200 :BELL
4300 DATA = '07'X.
4400 :SPACE
4500 DATA = '20'X.
4600 :CARRTN
4700 DATA = '0D'X.
4800 :FORMFEED
4900 DATA = '0C'X.
5000 :LINEFEED
5100 DATA = '0A'X.
5200 :VERMOV
5300 DIRECTION=UP

```

If you have successfully created and tested the LAN attached printer but do not plan on using it for production, take the following housekeeping steps:

a) Delete any spooled files that are using your printer device description. At a command line, enter "WRKSPLF" and press the <Enter> key. Type "4" (Delete) in the Opt field of the spooled file using your

printer device description and press the <Enter> key. Press the <Enter> key again to confirm deletion of the file. Repeat for all spooled files using your printer.

```

Work with All Spooled Files

Type options, press Enter.
  1=Send  2=Change  3=Hold  4=Delete  5=Display  6=Release  7=Messages
  8=Attributes  9=Work with printing status

Opt  File          User          Device or      User Data      Sts  Total  Cur
     QPSECQ       PATRICK      M355N         PRTQAUT       SAV   2      Page  Copy
     QPSUPRTF     PATRICK      MX5500Q      SAV           SAV  12      1
     QPSUPRTF     PATRICK      MX5500Q      corrected     SAV  12      1
  4   QPJOBLOG    PATRICK      MX5500       QPADEV0005   SAV   6      1

Bottom

Parameters for options 1, 2, 3 or command
===>
F3=Exit  F10=View 4  F11=View 2  F12=Cancel  F22=Printers  F24=More keys

```

b) Enter "ENDWTR WTR({printer device description}) OPTION(*IMMED)" at a command line and press the <Enter> key to end the printer writer.

```

Work with All Spooled Files

Type options, press Enter.
  1=Send  2=Change  3=Hold  4=Delete  5=Display  6=Release  7=Messages
  8=Attributes  9=Work with printing status

Opt  File          User          Device or      User Data      Sts  Total  Cur
     QPSECQ       PATRICK      M355N         PRTQAUT       SAV   2      Page  Copy
     QPSUPRTF     PATRICK      MX5500Q      SAV           SAV  12      1
     QPSUPRTF     PATRICK      MX5500Q      corrected     SAV  12      1

Bottom

Parameters for options 1, 2, 3 or command
===> ENDWTR WTR(MX5500) OPTION(*IMMED)
F3=Exit  F10=View 4  F11=View 2  F12=Cancel  F22=Printers  F24=More keys

```

c) At a command line, enter "VRYCFG CFGOBJ({printer device description}) CFGTYPE(*DEV) STATUS(*OFF)" and press the <Enter> key to vary off the printer.

NOTE: if you receive a system error message "Unable to obtain lock on device {printer device description}.", the writer is still active. Repeat step b) above.

```

Work with All Spooled Files

Type options, press Enter.
  1=Send  2=Change  3=Hold  4=Delete  5=Display  6=Release  7=Messages
  8=Attributes  9=Work with printing status

Opt  File          User          Device or      User Data      Sts  Total  Cur  Copy
    -  QPSECQ        PATRICK       M355N         PRTQAUT        SAV   2     2     1
    -  QPSUPRTF      PATRICK       MX5500Q        SAV            12    12    1
    -  QPSUPRTF      PATRICK       MX5500Q        corrected      SAV   12    12    1

Parameters for options 1, 2, 3 or command
===> VRYCFG CFGOBJ (MX5500) CFGTYPE (*DEV) STATUS (*OFF)
F3=Exit  F10=View 4  F11=View 2  F12=Cancel  F22=Printers  F24=More keys
    
```

d) Enter "DLTDEVD DEVD({printer device description})" at a command line and press the <Enter> key to delete the printer device description you created. In addition to the device description, you will also delete the associated output queue and writer. NOTE: if you receive a system error message "Device Description {printer device description} not deleted. Device in use.", the printer is still being used by a spooled file. Repeat step a) above.

```

Work with All Spooled Files

Type options, press Enter.
  1=Send  2=Change  3=Hold  4=Delete  5=Display  6=Release  7=Messages
  8=Attributes  9=Work with printing status

Opt  File          User          Device or      User Data      Sts  Total  Cur  Copy
    -  QPSECQ        PATRICK       M355N         PRTQAUT        SAV   2     2     1
    -  QPSUPRTF      PATRICK       MX5500Q        SAV            12    12    1
    -  QPSUPRTF      PATRICK       MX5500Q        corrected      SAV   12    12    1

Parameters for options 1, 2, 3 or command
===> DLTDEVD DEVD (MX5500)
F3=Exit  F10=View 4  F11=View 2  F12=Cancel  F22=Printers  F24=More keys
    
```

e) At a command line, type "CHGPRF PRTDEV(*WRKSTN) OUTQ(*WRKSTN)" and press the <Enter> key to restore your user profile to its default values for the print device and out queue.

Work with All Spooled Files

Type options, press Enter.

1=Send 2=Change 3=Hold 4=Delete 5=Display 6=Release 7=Messages
 8=Attributes 9=Work with printing status

Opt	File	User	Device or Queue	User Data	Sts	Total Pages	Cur Page	Copy
-	QPSECQ	PATRICK	M355N	PRTQAUT	SAV	2		1
-	QPSUPRTF	PATRICK	MX5500Q		SAV	12		1
-	QPSUPRTF	PATRICK	MX5500Q	corrected	SAV	12		1

Bottom

Parameters for options 1, 2, 3 or command

```
===> CHGPRF PRTDEV(*WRKSTN) OUTQ(*WRKSTN)
```

F3=Exit F10=View 4 F11=View 2 F12=Cancel F22=Printers F24=More keys

- f) Enter "SIGNOFF" at a command line and press the <Enter> key to log off of the AS400.

Work with All Spooled Files

Type options, press Enter.

1=Send 2=Change 3=Hold 4=Delete 5=Display 6=Release 7=Messages
 8=Attributes 9=Work with printing status

Opt	File	User	Device or Queue	User Data	Sts	Total Pages	Cur Page	Copy
-	QPSECQ	PATRICK	M355N	PRTQAUT	SAV	2		1
-	QPSUPRTF	PATRICK	MX5500Q		SAV	12		1
-	QPSUPRTF	PATRICK	MX5500Q	corrected	SAV	12		1

Bottom

Parameters for options 1, 2, 3 or command

```
===> SIGNOFF
```

F3=Exit F10=View 4 F11=View 2 F12=Cancel F22=Printers F24=More keys

- g) Exit the terminal emulation program.