

## Changing the output for copies to the Finisher Tray on Sharp 35-45 ppm machines

March 14, 2012

**Models:** AR-M355, AR-M455, MX-M350, MX-M450

Custom Settings/System Settings > Key Operator/admin login (00000) > Copy Settings > Initial Status Settings > Output > Auto > Finisher Tray > OK

Les Olson Company Knowledge Base

<http://kb.lesolson.com/InstantKB2016/KnowledgebaseArticle50450.aspx>