

Setting the Fax Default Output Tray for Sharp MFPs

March 9, 2015

Models: All MFP's

Symptom: Faxes are mixed with Print and Copy jobs.

Cause: Default Output Tray is the same for all modes.

Solution: Change the Fax Default Output Tray. Launch the machine's Web page. Click System Settings > Image Send Settings, and log in as administrator; click Fax Settings > Receive Settings, and specify the desired Output Tray.

Les Olson Company Knowledge Base

<http://kb.lesolson.com/InstantKB2016/KnowledgebaseArticle50601.aspx>